Infrared Mobile Digital Scouting Camera

User Manual MG883G-14mHD



Content

<u>1 Instruction</u>

1.1 Camera Body Interfaces



1.2 General Description

This camera, a digital scouting camera with black IR and 3G communication function, is a digital infrared surveillance camera, triggered by any movement of humans or animals monitored by a high sensitive Passive Infrared (PIR) motion sensor, and then automatically captures high quality pictures or records video clips according to default settings or preset customer settings. It will then send the pictures instantly to your mobile device or e-mail via GSM/WCDMA network. You'll be alerted just when the camera is triggered or per custom settings.

There is a 1.44" color LCD display screen on the camera and a sound recorder embedded in the camera. A laser pointer is used to help target the photo area of the camera.

It is resistant against water and snow. The camera can also be used as a portable digital camera.

1.3 Remote Control

The remote control is the input device for the camera and is primarily used for customer settings. This is an infrared type wireless remote control. The maximum remote distance is about 30 feet.

Note:

The remote will not work properly without the antenna attached.

When power on the camera, allow approximately 10-20 seconds

for the camera to acquire a signal. The remote will not function properly until the camera has acquired a signal. You can determine that the camera has acquired a signal by locating the signal icon on the LCD screen.



Press the punctuation "*" for laser pointer.



1.4 Shooting Information Display

When the camera is turned on (power switch is slid to TEST position), the current settings will be displayed on the screen.



1.5 Two Way Communication

You can set SMS control submenu as ON to open the two way communication function. Under this setting, the camera can receive and respond to your SMS command or the Android APP command. This camera can send pictures instantly to your mobile device via WCDMA/GSM network. You'll be alerted just when a picture or video has been taken. The camera sends MMS or Email message through MMSC(MMS Service Center) or GPRS network, so before using this function, you need to open MMS and GPRS service from your service provider. It supports following bands:GSM with 850MHz, 900MHz, 1800MHz and 1900MHz; WCDMA with 850MHz, 900MHz, 1900MHz and 2100MHz.

SIM card Icon: There are two SIM card icons which stand for different installation situations. \bigcirc means the SIM card is inserted and it works well. \boxtimes means the MMS function can't work correctly because of loss of signal or other communication issues.

1.6 Cautions

- ★The working voltage of the camera is 6V.The camera is supplied by 8 AA batteries or DC power adapter with output of 6V. Please install batteries according to shown polarity.
- ★ Please insert the SD card when the power switch is in the OFF position before testing the camera. The camera has no internal memory for saving images or videos. If no SD card is inserted, the camera will shut down automatically after a continuous indication beep.
- ★ Please do not insert or take out the SD card when the power switch is in the ON position.
- \star It is recommended to format the SD card by the

camera when used for the first time.

- ★The camera will be in USB mode when connected to a computer. In this case, the SD card function is as a removable disk.
- ★In TEST mode, the camera will shut down automatically after 3 minutes if no operation is done. Please turn on the power again if you want to continue to work with the camera.

<u>2 Quick Start Guide</u>

2.1 Power Supply

To supply power for the camera, four or eight size AA batteries are needed.

1. High-density and high-performance alkaline

batteries (Recommended)

- 2. Rechargeable alkaline batteries
- 3. Rechargeable NiMH batteries

When in a low-battery state, the camera will be automatically shut down after two indication sounds. Please change the batteries at this time. If you have set the MMS function, it will send you a SMS or Email to indicate the low battery situation.

Caution: Risk of explosion if battery is replaced by an incorrect type. Also dispose of used batteries according to the instructions.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

2.2 Insert the SD card and SIM card

Open the bottom cover. Insert SD card and SIM card into the card slot. Please note that the SD card is on the "write" (not locked) position otherwise the camera will not function correctly.

2.3 Do the Camera Settings

Down load the camera setup software (BMC_config.zip) with a simple instruction from our website. *The specified website is written in the last page of the manual.*



BEC CONFIG : For EG8828	(-8)IHD	
Boly Media Com	munications Co., Ltd. (BMC)	
WAP / L	nternet Setting	Camera Setting
Select Country	Select Operator	Click "Default Setting" button if you don't
Australia	China-Mobile	know how to modify camera parameters !
Austria Canada Chech China	China-Unicom China-Unicom 3G Others Step1	Default Setting (D) Step2
Check WAP / In	nternet Parameters (<u>L</u>)	Change Setting (C)
	Customer Informati	on Setting
AdminNumber 138	00000000 Receiv	e Email 1 (bolytest@bolyguard.com)
Phone Number 2 :	Receiv	e Email 2 :
Phone Number 3 :	Receiv	e Email 3 : Step3
Phone Number 4 :	Receiv	e Email 4 :
Attention Please , The Da	ta Above Will Be Saved In The	Following File:
E.\GSM\MG882K.TXT	>	Step4
4	SAVE (Y)	EXIT (<u>N</u>)

First, select your country and carriers (step1) according to your SIM card and input your receiving phone number in "administrator number" and receiving e-mail address in "Receive Email 1" (step3). For first time use, we suggest you to use default settings (step2), any settings you want to change, please click "Change Setting".

Please note save the txt file in the root directory of GSM folder of SD card after all settings being done (step4), the file will automatically disappear once camera is turned on.

2.4 Enter into Test Mode

Slide the power switch to the TEST position and

enter into TEST mode, default the camera in menu setting. There are some functions in TEST mode: custom settings, manual capture, preview or send MMS manually. The remote control is needed in this mode.

2.5 Custom Settings

Press **MENU** on the remote control to enter into the menu setting. The camera can be adjusted to manually customize the camera settings which display on the LCD screen of the camera.

You can press **RIGHT** key to manually capture photos or record a video and again **RIGHT** to stop a video after exit menu setting.

When **Send Mode** is set as "Manual", you can send the selected photo (in playback mode by pressing **OK** to enter) to the preset address in TEST mode. "Daily Report" and "Instant" mode are used in ON mode. Please note that the images can only be sent and video cannot be sent. If the SIM card is not inserted, the image cannot be sent as well.

2.6 Enter into On Mode

Slide the power switch to the **ON** position to power on the camera and enter into the **ON** mode. Before entering into the ON mode, you can adjust the camera towards the target monitoring area by laser pointer (press * on the remote to control).

After switching on the camera, the motion indication LED (red) light will blink for about 10s.

The 10s is a buffering time before automatically capturing photos or videos, e.g. for closing and locking the bottom cover, fixing the camera on a tree and walking away.

The camera has the sound recording function, so the sound will be embedded in the video clip while capturing a video.

2.7 SMS Control

When camera is in ON mode, you can send text message to camera to change some settings. Besides,

command of "#T#" can help you to get an on spot image. Also we support an Android application tool for you to send commands to the camera. But the APP will charge you an SMS fee for each command.

Down load the Android control software (BGTools.zip) from our website. For Iphone, just download it from the APP Store by searching BGTools.

<u>The specified website is written</u> <u>in the last page of the manual.</u>



2.8 SMS Command List

No	Function	SMS Command
1	Set MMS	#m# <u>http://mmsc.cingular.com</u>
	Parameters	<u>#66.209.11.32#8080#wap.cingu</u>
		<u>lar# account#password#</u>
		(The example parameters
		are for the carrier of AT&T)
2	Set GPRS	<u>#s#bmctest123@163.com#b</u>
	Parameters	<u>mc123#25#cmnet#smtp.163</u>
		.com#account#password#
		(The example parameters
		are for 163 email)
3	Set Normal	#n#13800138001#1380013
	User's	8002#13800138003#
	Phone	
4	Set Receive	#r#bmc1@sina.com#bmc2
	Email	@sina.com#bmc3@bmc3@s
	Address	ina.com#
5	Get On Spot	#t# (Send MMS to phone)
	Photo	#t#e# (Send picture to
		Email by GPRS)
6	Check Camera	#L#
	Settings	
7	Edit Work	#e#cp#s5#fh#b1#v60#t#l10
	Parameters	m#pn#i5s#Hon08:30-20:30
		(cp: camera mode, s5:photo
		size, fh: video size, b1:photo
		burst, V60: video length, t:
		set clock, l10m: time lapse,
		pn: pir trigger, i5s: PIR

			interval, mp: send to, Hon: work hour)
8	Format Card	SD	#F#
9	Help		#H#

Note all sms commands are only available by admin number, each camera has only one admin number.

2.9 Power Off

Slide the power switch to **OFF** position to power off the camera. Please note that even in **OFF** mode, the camera still consumes a small amount of battery power. Therefore, please remove the batteries if the camera is not in use for a length of time.

<u>3 Item Settings</u>

3.1 Camera Menu

To view the camera settings menu, press **MENU** in **TEST** mode. With the remote, use " \blacktriangle " or " \blacktriangledown " key to select the sub-menu, use " \blacktriangleleft " or " \triangleright " key to select the different options. Press "OK" to save the settings.

After changing EACH setting in TEST menu you must press "OK", otherwise the camera will stay at the default setting.

Setting	Description	
Items		
Langu age	Choose language you need. It supports four languages: English, Finnish, German, Swedish.	
Camer	Choose capturing Photo, Video or	
a Mode	Pic+Video.	
Set Clock	Set camera date and time. You can change the date and time of the device by setting this parameter when necessary, e.g., after every battery change. The date format is month/day/year , the time format is hour: minute: second . The valid value for year is between 2015 and 2050.	
Photo	Choose the image size, e.g. 14 mega	
Size	pixels, 10 mega pixels or 5 mega pixels.	
Photo	Choose the continuous shooting numbers	

Burst	after each triggering.
Video	Choose the video size: 1280x720 or
Size	640x480.
Video Length	Choose duration of recording video. This parameter is effective and can be adjusted only when the device in the video mode under ON mode. Its value extends from 5 to 60 seconds with a step of one second. The default value is 10 seconds. Press LEFT and RIGHT to decrease or increase the value by 1 second.
Time Lapse	Time lapse means the camera can capture images or videos at a preset time interval regardless of whether motions are detected. The default parameter is Off, which means the timer function is disabled. Changing this parameter to a non-zero value turns on the Time Lapse mode, and camera will take photos at given time interval. Please note that if the PIR Trigger is set to Off, then the Time Lapse can't be set to Off.
	Choose sensitivity of the PIR sensor.
	This parameter defines the sensitivity of
	the PIR. There are four sensitivity
	parameters: High, Normal, Low and Off.
PIR	The default value is "Normal". The higher
Trigge	degree indicates that the Camera is more
r	easily to be triggered by motion, taking

	more pictures or recording more videos.				
	It is recommended to use high sensitivity				
	degree in room or environment with little				
	interference, and to use lower sensitivity				
	for outdoor or environment with lots of				
	interference like hot wind, smoke, near				
	window etc. Furthermore, the sensitivity				
	of the PIR is strongly related to the				
	temperature. Higher temperature leads				
	to lower sensitivity. Therefore it is				
	suggested to set a higher sensitivity for				
	high temperature environment.				
	Please note that if the Time Lapse is				
	set to Off, then the PIR Trigger				
	can't be set to Off.				
	This parameter indicates how long the				
	PIR (Passive Infrared motion sensor) will				
	be disabled after each triggering in ON				
	mode. During this time the PIR of the				
PIR	device will not react to the motion of				
Interva	human (or animals). The minimum				
1	interval is o second, it means the PIR				
	works all the time. The maximum				
	interval is 1 hour. It means the PIR will				
	be disabled for 1 hour after each				
	triggering. Press LEFT or RIGHT to				
	decrease or increase the value.				
	Choose a time period of a day to let the				
Work	camera work. The camera will awake at				
Hour	the setting time duration in a day. In the				
	rest of the time the camera is sleeping.				

	Set Work Hour as off means the camera
	works all day.
	The camera sends MMS message through
	GPRS network, so before using this
	function, you need to open GPRS service
ММС	from your service provider. You should
Sot	set the right MMS setting parameters.
Sel	The settings of MMS: URL, APN, IP and
	Port . Please contact the network service
	provider if you are not familiar with the
	settings.
	The camera sends image through GPRS
	network with SMTP protocol to an Email
	address. In this way the communication
	cost will be much cheaper in many
GPRS	countries. You should set the right GPRS
Set	setting parameters. The settings of GPRS:
	Email server port, APN and so on,
	please contact the network service
	provider if you are not familiar with the
	settings.
	There are 3 sending modes:
	"Manual"works in TEST mode, "Daily
	report"and"Instant"work in ON mode.
	1)"Manual":
Send	Choose"Manual" in Test mode. Please
Mode	ensure a SIM card is inserted properly;
	Please note, only photos can be sent,
	video information can't be sent in TEST
	mode.
	2) "Daily Report" :

Daily Report works only in the ON mode, which means that the camera will report the summarized information at the preset time (if the preset time is, eg.20:00PM) on how many pictures it had taken per day. So, you will get a summarized text message with the last picture taken until 20:00PM.

If it is on Photo mode, the camera will send a MMS at the preset time. The MMS will show you the latest photo and the total qty of the pictures got taken. If it is on Video mode, the camera will send a SMS at the preset time. The SMS will show you how many video clips the camera has taken within 24 hours.

3) "Instant":

Instant, just works in ON mode, which means the camera will send a MMS instantly after it captures a photo. You can choose the number of how many pictures you want it to send out per day.

If it is on Photo mode and you chose the Instant MMS mode, and set the MAX number is 10, the camera will send 10 MMS within 24 hours .And then it continues to capture photos and save them on the SD card. After 24 hours, the camera will send MMS again when it captures photos. If it is on Video mode, the Camera will send only SMS instead of

	MMS.				
	4) "OFF": To disable communication				
	function.				
	Choose sending the image to your Phone				
	or to Email.				
	Phone[MMS]:Send the image to cell				
	phone via WAP.				
Send	Email[MMS]:Send the image to Email address via WAP.				
То					
	Email[GPRS]:Send the image to Email				
	address via SMTP . In this way the				
	communication cost will be much				
	cheaper in many countries.				
	SMS Control can enable two way				
	communication function. It means if you				
GN FG	choose SMS Control as ON, this				
SMS	camera can receive and respond to your				
Contro	SMS command. Also you can retrieve live				
l	pictures at any time. But the power				
	consumption will be a little more than				
	normal hunting status.				
	It means camera position. You can set				
Positio	A-Z position for your camera, so that you				
n ID	can distinguish which photo is taken by				
	which camera.				
Versio	This parameter shows the information				
n	about Firmware and IMEI of this camera				
	All images and videos in the SD card will				
Forma	be deleted so make sure that you have				
t SD	made a backup of important data				
Dofaul	Restore all customer settings to default				
Delaul	Restore an customer settings to delault				

t Set values.

3.2 Default Setting

Setting Items	Default	Options	Submenu
		Suomi	
Language	English	Deutsch	
		Svenska	
Camera	Dhoto	Video	
Mode	Photo	Pic+Video	
Set Clock	Enter		Adjust Clock
Dhoto Sizo	1 4 N/D	5MP	
Photo Size	141/11	10MP	
Photo	1 Dhoto	2 Photos	
Burst	1 11010	3 Photos	
Video Size	1280x720	640x480	
Video	10 000	5–60 sec	
Length	10 sec		
Time	Off	5–55Min	
Lapse	UII	1–8Hour	
DID		High	
FIK Triggor	Normal	Low	
Ingger		Off	
PIR		0–55 Sec,	
Interval	5 560	1–60 Min	
Work	Off	On	00.00 00.00
Hour			00.00-23.59
MMS Sot	Entor		URL, APN, IP,
	EIIter		Port
GPRS Set	Enter		Server, Port,

			APN
		Daily	
Send	Manual	Report,	
Mode	Walluar	Instant,	
		Off	
		Email[MM	
Send To	Phone[M	S],	
Send 10	MS]	Email[GPR	
		S]	
SMS	Off	On	
Control			
Position	Off	Δ-7	
ID	OII		
Version	Enter		Firmware
Version			IMEI
Format	Enter		Ves No
SD			105,110
Default	Save		
Set			

3.3 Playback Mode

In playback mode, images or videos can be viewed and deleted. An image can also be manually sent by MMS or GPRS. It can only be done in TEST mode. The images can be viewed on the LCD screen on camera. The videos can only be viewed on your computer. For simplicity, operations with PC won't be introduced here.

View photo in playback mode: Press **OK** of the remote to view the latest picture in **TEST** mode, **UP**

or **DOWN** to view the previous and the next one. And **OK** to return to info display. Note that video can not be displayed on the screen.

Delete photo or video: View the image (or video) which to be deleted, select the one you want to delete. Press **MENU**, then **UP** or **Down** to delete.

3.4 Laser Pointer

The laser light pointer beam can be turned on as an additional function for pointing to an object or a certain region of interested (ROI) by pressing * of the remote.

NOTE:

The laser could be harmful to eyes if pointed at other person.

<u>4 Trouble Shooting</u>

1 There is something in front of the camera lens. Is the camera broken?



A: The camera is not broken. It's an IR-cut filter. When the camera is powered on, the IR-cut will be reset and cover the lens. Only when the camera is powered off, the IR-cut will be at a random place.

2 The camera display screen is not working anymore.

A: Most likely, no SD card has been inserted in the camera when it is turned on. Please make sure a working SD card has been inserted in the camera before it is turned on.

3 Why my phone can't receive MMS?

A: MMS/GPRS function needs the SIM cards in both your camera and phone to have enough balance and to be opened to data business.

<u>5 PIR Detection Zone</u>

This camera has a new design of PIR and the new PIR is patented. The new patented PIR's detection range can reach to 100ft in good environments. Following picture shows the compared detection zone between normal PIR and the new patented PIR.



The PIR detection angle (α) is just smaller than the field of view (FOV) angle (β). The advantage of this design is to reduce empty picture rate and capture most, if not all, motions.



<u>6 Technical Specifications</u>

Imaga Sancan	5MP Color CMOS,	
Illiage Selisor	10MP, 14MP Interpolation	
Long	F/NO=2.4	
Lens	FOV(Field of View)=57°	
PIR detection	100#	
range	10011	
Display Screen	1.44" LCD	
Memory Card	From 8 MB to 32 GB	
Disturs	14MP=4320×3240	
Picture	10MP = 3648×2736	
Resolution	$5MP = 2560 \times 1920$	
Video Decolution	1280x720	
video Resolution	640×480	
PIR Sensitivity	Adjustable (High/Normal/Low)	
Trigger Time	1.28	
Weight	0.30 kg (without battery)	
Operation/Storag	-20 - +60°C / -30 - +70°C	
e Tem.		
Power Supply	8×AA or 4×AA	
Power Supply	8×AA or 4×AA External DC 6V,2A	
Power Supply Low Battery Alert	8×AA or 4×AA External DC 6V,2A LED Indicator	
Power Supply Low Battery Alert Sound Recording	8×AA or 4×AA External DC 6V,2A LED Indicator Available	
Power Supply Low Battery Alert Sound Recording Mounting	8×AA or 4×AA External DC 6V,2A LED Indicator Available Rope/Belt/Python lock	
Power Supply Low Battery Alert Sound Recording Mounting Dimensions	8×AA or 4×AA External DC 6V,2A LED Indicator Available Rope/Belt/Python lock 140 x87 x55 mm	
Power Supply Low Battery Alert Sound Recording Mounting Dimensions Operation	8×AA or 4×AA External DC 6V,2A LED Indicator Available Rope/Belt/Python lock 140 x87 x55 mm	
Power Supply Low Battery Alert Sound Recording Mounting Dimensions Operation Humidity	8×AA or 4×AA External DC 6V,2A LED Indicator Available Rope/Belt/Python lock 140 x87 x55 mm 5% - 90%	
Power Supply Low Battery Alert Sound Recording Mounting Dimensions Operation Humidity Security	8×AA or 4×AA External DC 6V,2A LED Indicator Available Rope/Belt/Python lock 140 x87 x55 mm 5% - 90%	

<u>7 Parts List</u>

Part Name	Quantity
Digital Camera	One
Wireless Remote	One
USB Cable	One
Belt	One
User Manual	One
Enhanced Antenna	One
Warranty Card	One

Down load the APP software from here:

http://www.bolyguard.com/download.html



Version 1.1

Page 26